





Description of Hifidelio USB keyboard

Space bar or Return:	Play/Pause
Esc:	Stop
Cursor right or left:	Corresponding to outer wheel
Cursor up or down:	Corresponding to inner wheel
Bild↑ :	Previous track (key shortly pressed)
	Fast rewind (key held pressed)
Bild↓ :	Next track (key shortly pressed)
	Fast wind (key held pressed)
“*” on key pad (FN + “0“(Zero) key):	Record
F1, F2, F3, F4:	Function keys on the right hand of the display
F5:	Artists
F6:	Albums
F7:	Songs
F8:	Genres
F9:	Playlists
F10:	Audio CD
F11:	Random (on / off)
F12:	Info
FN + F10:	Eject CD
“+“ on key pad (FN + “Ö“ key):	Louder
“-“ on key pad (FN + “P“ key):	Lower
Pos 1:	First title in a list
Ende:	Last title in a list
	Internet Radio
	Preferences
	Sleep mode, resp. wakeup from sleep mode
	Switch-off, resp. wakeup from sleep mode

Should you need some help with your Hifidelio, please contact our support team per telephone (+49 621 7650-200) or per email (support@hermstedt.de) from Monday to Friday 9-12 am and 13-17 pm (German time).